

onn.™

Clock Radio With Wireless Charging

Model: 100008727

PRODUCT GUIDE

12/09/2019_Revision

 
12/09/2019_Revision

We 'd love to hear from you. Scan with your Walmart app and let us know what you think.



Features


Top

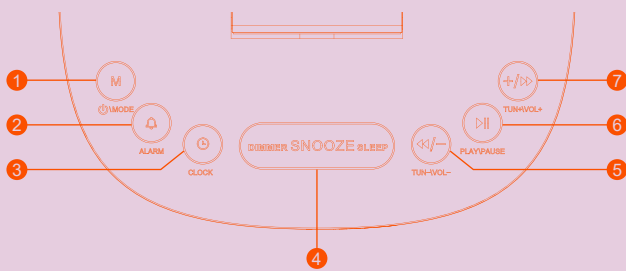

#	Item	Description
①	Mode button 	(1) Press Mode button to power at Bluetooth mode as default (2) Press Mode button to switch between Bluetooth and FM mode (3) Press and hold Mode button x 3 seconds for OFF mode
②	Alarm button 	In Clock mode, press to turn on or turn off alarm; In other modes, press to return to Clock mode; In any mode, press and hold 3 seconds to enter alarm clock settings.
③	Clock button 	In other modes, press to return to Clock mode; In any modes, press and hold 3 seconds to enter clock settings.
④	Dimmer/Snooze/Sleep 	When alarm rings, you can press to adjust the interval to repeat alarm. The alarm repeats ringing 10 minutes later. When alarm not rings, press it to adjust LED brightness, press and hold 2 seconds to set up sleep timer.
⑤	Volume Down/Previous Track 	In BT mode, press to switch to previous track; In FM Mode, press to tune in 0.1MHz increments or switch preset stations, double-click to start auto scan until find a lower available channel, and press and hold to decrease volume. In any modes, press and hold to decrease volume.
⑥	Play/Pause 	In AUX mode and BT mode, press to play or pause audio; in FM mode, press to enter preset station play mode, press and hold 2 seconds to set preset station.
⑦	Volume Up/Next Track 	In BT mode, press to switch to next track; In FM Mode, press to tune in 0.1MHz increments or switch preset stations, double-click to start auto scan until find an upper available channel. In any modes, press and hold to increase volume.


12/09/2019_Revision

 Rear

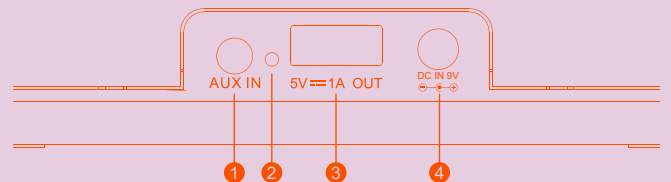

#	Item	Description
①	AUX IN jack	Connect to an external audio device.
②	FM antenna	The FM antenna is an 80cm pigtail cable, keep it fully extended to get the best signal reception.
③	USB port	Connect to charge an external device.
④	DC IN jack	Connect to the included power adapter.

 LED Digital Display

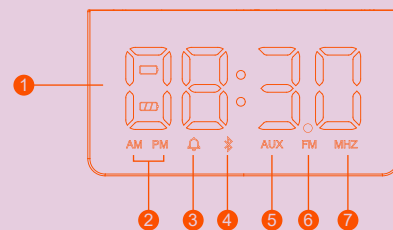

#	Item	Description
①	Current time	Displays the current time.
②	AM/PM	"AM" lights after midnight and before noon, and "PM" lights after noon and before midnight.
③	Alarm	Lights when alarm has been set and enabled.
④	Bluetooth	Lights when BT mode is selected.
⑤	AUX	Lights when an external audio is connected.
⑥	FM	Lights when FM mode is selected.
⑦	MHz	Lights when FM mode is selected.

12/09/2019_Revision

Package Contents

- 1x Clock Radio
- 1x 9V/3A Power Adapter
- 1x User Guide
- 1x Quick Start Guide

Connect to Power

– **Risk of product damage!** Use the include 9V/3A Power Adapter ONLY. Connect the AC power cord to the wall socket.

Power off

In any modes, press and hold **M** button for 3 seconds to turn off the machine. Only clock will be shown on display. (Without alarm and BT icon)

Set Clock Time

In any modes, press and hold **⌚** button for 3 seconds, you will see the LED hour section blinks, then press **◀/–** or **▶/+** button to adjust the hour, after hour is set, press **⌚** button to switch to minute, the LED minute blinks, then press **◀/–** or **▶/+** button to adjust the minute, after minute is set, press **▶||** to confirm setting (If no button is pressed for 15 seconds, the setting is saved automatically).

Set Alarm Time

In any modes, press and hold **🔔** button for 3 seconds, you will see the LED hour section blinks, then press **◀/–** or **▶/+** button to adjust the hour, after hour is set, press **🔔** button to switch to minute, then press **◀/–** or **▶/+** button to adjust the minute, after minute is set, press **▶||** button to confirm setting (If no button is pressed for 15 seconds, the setting is saved automatically).

Set Alarm Volume

In Alarm setting mode, press **◀/–** or **▶/+** to adjust the Alarm volume.

Set Alarm Sound

After set the alarm minute, press **🔔** button two times to enter alarm tone selection, then press **◀/–** or **▶/+** button to choose the tone you want (1, 2, 3, 4 tones plus 5 FM radio tone), after tone is set, press **▶||** button to confirm setting (If no button is pressed for 15 seconds, the setting is saved automatically). When FM is set as alarm tone, press **◀/–** or **▶/+** to adjust the Alarm volume.

Turn On/Off Alarm

Press **🔔** button to turn off or turn on alarm, the LED alarm icon keeps off or on correspondingly. If no one stop the alarm, it will keep ringing for 1hrs and stop automatically.

Use Snooze Feature

- 1) To repeat alarm, when alarm rings, press **DIMMER SNOOZE SLEEP** button to snooze for 9 mins.
- 2) When alarm (normal tones) rings, press any button (expect **DIMMER SNOOZE SLEEP** button) to stop alarm. The alarm stops, but the alarm setting remains.
- 3) When alarm (FM tone) rings, press **◀/–** or **▶/+** to adjust FM volume. Therefore, press any button (expect **DIMMER SNOOZE SLEEP** button & **◀/–** or **▶/+**) to stop alarm. The FM stops, but the alarm setting remains.

12/09/2019_Revision

Set the Sleep Timer

In BT/AUX/FM modes, press and hold **DIMMER SNOOZE SLEEP** button to adjust sleep timer, there are "90/60/30/15 minutes" and "OFF" total 5 options, after you get to the desired option, let go off **DIMMER SNOOZE SLEEP** button to confirm selection.

Play FM Radio

- 1) The default mode upon power on is OFF mode. Press **M** button to switch to FM mode. (FM supports 87.5MHz to 108MHz)
- 2) Press **◀/–** or **▶/+** button to tune frequency for 0.1MHz each time, double-click **◀/–** or **▶/+** button to start auto scan, it stops until a station is found, auto scan will be interrupted by press **◀/–** or **▶/+** button.
- 3) Tune to the radio station you want to program, then press and hold **▶||** button for 2 seconds to enter preset mode. The next available preset number (P-01 through P-10) appears on the LED. If you want to use a different preset number, press **◀/–** or **▶/+** button repeatedly until the number you want appears on the LED, then press **▶||** button again to save your station and exit preset mode with "beep" voice prompt. (If no button is pressed for 15 seconds, the setting is saved automatically).
- 4) Press **▶||** button to enter play preset station mode, and the last played preset station number (P-01 through P-10) appears on the LED, then press **◀/–** or **▶/+** button repeatedly until the preset station you want appears on the LED. Press **▶||** button again to exit play preset station mode.
- 5) Press and hold **◀/–** or **▶/+** button to adjust volume, the volume level number appears on LED.

Adjust LED Brightness

When alarm no sounds, short press **DIMMER SNOOZE SLEEP** button to adjust LED brightness, there are low, medium and high three levels for selection. In power off status, the digital LED will turn into the lowest brightness (default).

Play Audio from a Bluetooth Device

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 10 meters (without any object between the Bluetooth device and the unit).
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1) Press **M** button to switch to BT mode, you will hear a "Bluetooth Mode" prompt tone, and clock radio automatically enters Bluetooth pair with Bluetooth name "ONN 2.0 Qi Clock Radio", there will be a "Bluetooth Pairing" prompt tone if pairing success and you will hear "Bluetooth Disconnected" when disconnected.
 - 2) Press and hold **▶||** button for 3 seconds to disconnect the current connected device, clock radio re-enters pairing status.
 - 3) When Bluetooth is disconnected, press **▶||** button and clock radio will reconnect with the device that has connected before.
 - 4) Press and hold **◀/–** or **▶/+** button to adjust volume, the volume level number appears on LED.

12/09/2019_Revision

Connect an External Audio Device

- 1) In any mode, plug an audio cable with a 3.5 mm connector (not included) into the AUX IN jack on the back of your clock radio and into the audio out jack on your audio device, clock radio enters AUX mode automatically and plays the audio from your audio device, LED AUX icon keeps on.
- 2) Press and hold **◀/–** or **▶/+** button to adjust volume, the volume level number appears on LED.

Return Factory Default

Press and hold **◀/–** or **▶/+** together for 10 seconds until "beep" to return factory default. The previous Clock settings, Alarm settings and Bluetooth pairing settings will be cleared.

Wireless Charging a Mobile Device

- 1) Plug in the included 9V/3A power adapter and your clock radio is powered on.
- 2) Make sure your device supports Qi charging technology.
- 3) Put your device horizontally on the wireless stand, DO NOT put it vertically as this will make it beyond charging arrange.
- 4) Your device will show charging status if charge successfully.

Charge a Mobile Device via USB-A Port

- 1) Plug in the included 9V/3A power adapter and your clock radio is powered on.
- 2) Connect a USB cable (not provided) to the USB port on the back of your clock radio and to the USB port on your device.
- 3) Your device will show charging status if charge successfully.

FCC WARNING:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

12/09/2019_Revision

ISED/C CAUTION:

This device complies with Innovation, Science, and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

ISED/C RF EXPOSURE STATEMENT:

The device is in compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

IMPORTANT LEGAL INFORMATION

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Listen responsibly. To avoid hearing damage, make sure the volume on your device is turned down before connecting to the speaker. After turning on your speaker, gradually turn up the volume until you reach a comfortable listening volume.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by Blackweb.
- Blackweb is not liable for any damage caused to smartphones, iPod/MP3 players, or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Never operate this product if it has a damaged cord, plug, cable, or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surfaces wet from water or cleaning solvents.

Please use the standard power adapter equipped with this unit.

The charging input and output ports, please do not connect to any faulty equipment to avoid the irreversible damage of the unit.

Do not use in a strong magnetic or strong interference field, otherwise it may cause the machine to be functionally unusual.

The product is for indoor use only.

A MESSAGE FROM THE ENVIRONMENT

WARNING: This product has an internal, non-replaceable lithium-ion battery. Please dispose of in accordance with your local, state, province, and country guidelines. This product contains small parts that may present a choking hazard for young children. **CAUTION:** All servicing of this product must be performed by authorized service personnel only.

Blackweb is a trademark of Walmart Stores, Inc. The 'Qi' symbol is a trademark of the Wireless Power Consortium. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Blackweb is under license. Distributed by Walmart Stores, Inc., Bentonville, AR, 72716
1-800-925-6278. ©2018 Walmart Stores, Inc. All rights reserved.

12/09/2019_Revision